






## FIRMWARE UPDATE ROUTINE for NIXVUE VISTA

1. Download the latest firmware from the Nixvue web site ([www.nixvue.com](http://www.nixvue.com)). Unzip the file onto your PC hard drive and you should see a NIXVUEVISTA directory.
2. Ensure Vista is connected to an AC Adaptor when upgrading the firmware. This is a safety precaution to ensure that the firmware upgrading process will not be interrupted due to weak battery.
3. Connect Vista to your computer through USB and transfer NIXVUEVISTA to the unit. Then poweroff and disconnect USB cable. Next, power the Nixvue back on.
4. Press the  button to get back to Main Menu.
5. Press the ,  and  button at the same time and hold it until you see the "Update Software?" display.
6. Press  button to begin the firmware update process.
7. The updating of the firmware should take approximately seven (7) minutes to complete. During the updating, do not move the unit or turn off the power supply.
8. An "Updating Flash Please Wait..." message is displayed throughout the update process. This is followed by a Software Update and Printer Driver Update display. An "Update Completed" message will be displayed once the firmware is upgraded successfully.
9. Power down the unit and power it on again, the unit will run with the new firmware.



Note: Last firmware issued by Nixvue (prior to their closing) was Version 4.07.01.040714